



## PLEASE CONTACT US FOR RETURNS AND OTHER QUESTIONS


Email our support team at: orders@rizebeds.com
Or call us at: 844-545-8865


Parts are inside the headboard in the compartment located on the back of the headboard

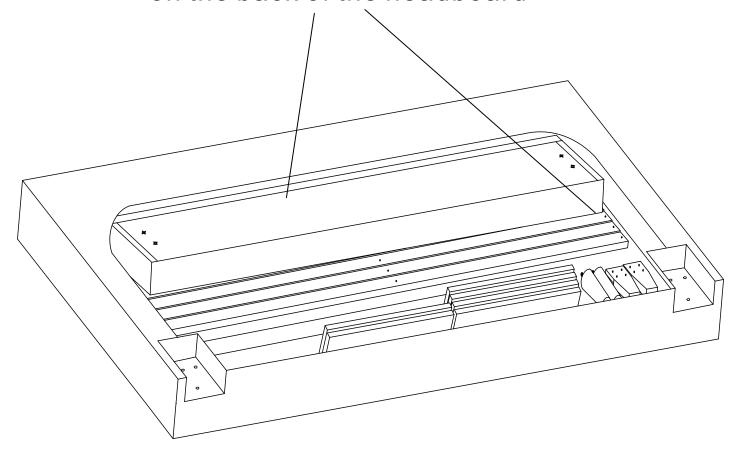


## Remove parts from headboard compartment

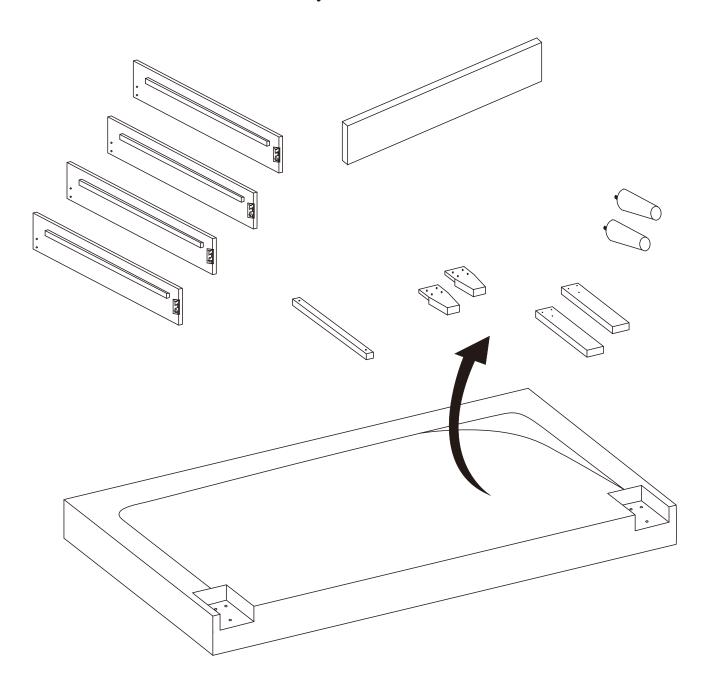


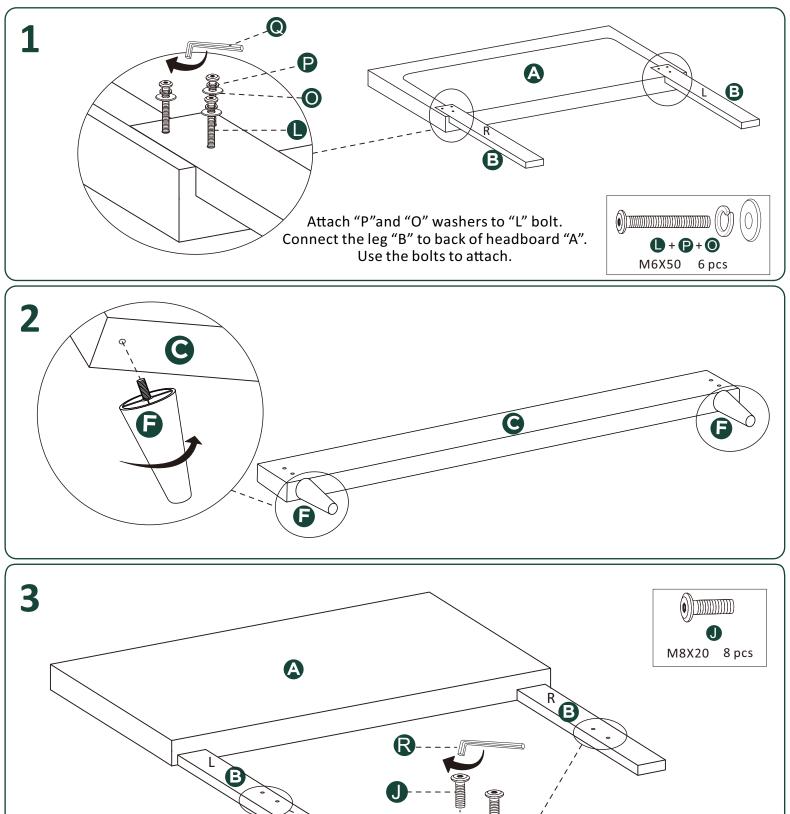


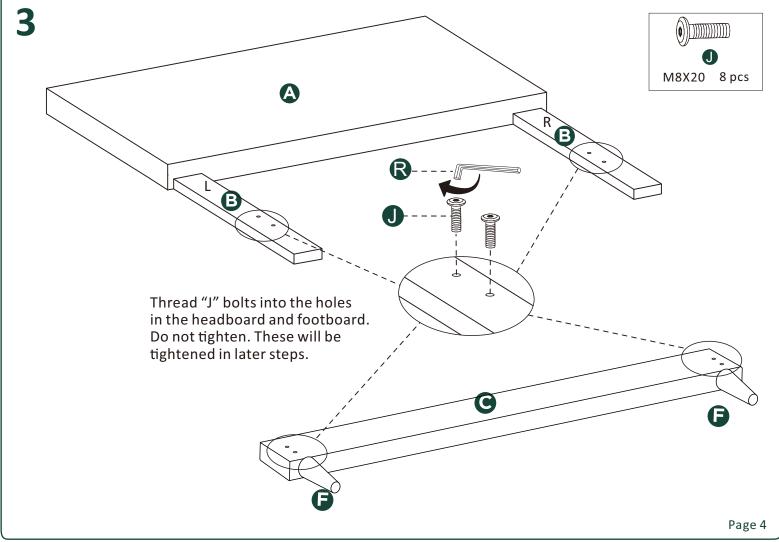









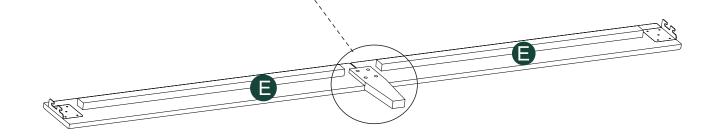

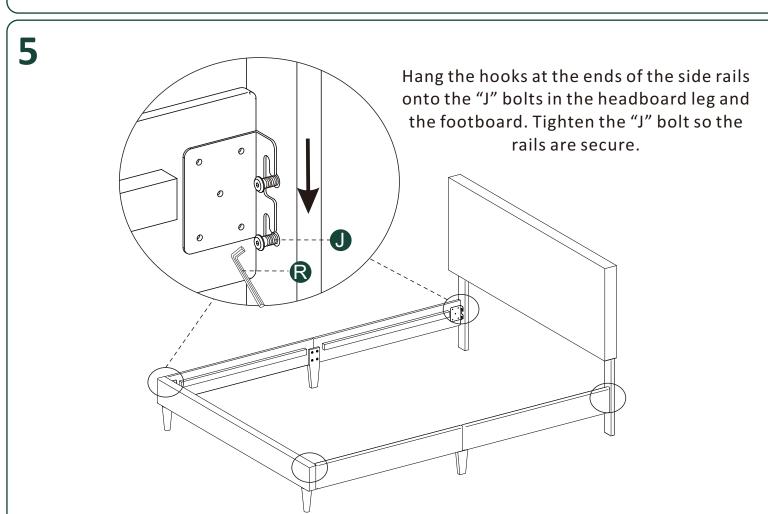




Assemble the slat system by attaching the slats to the "I" supports and "H" legs. First, extend the slats. Then, line up the holes in the slats with the holes in the "I" supports and the holes in the tops of the "H" legs. Use an "M" bolt through the holes to attach them together.

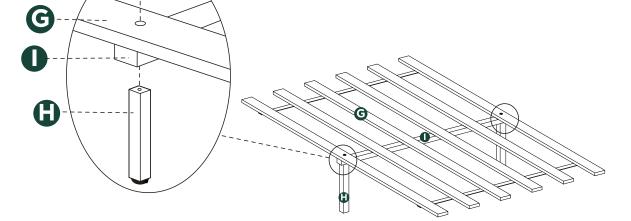

After the slat system is assembled, place the slats into the frame of the bed as shown below.



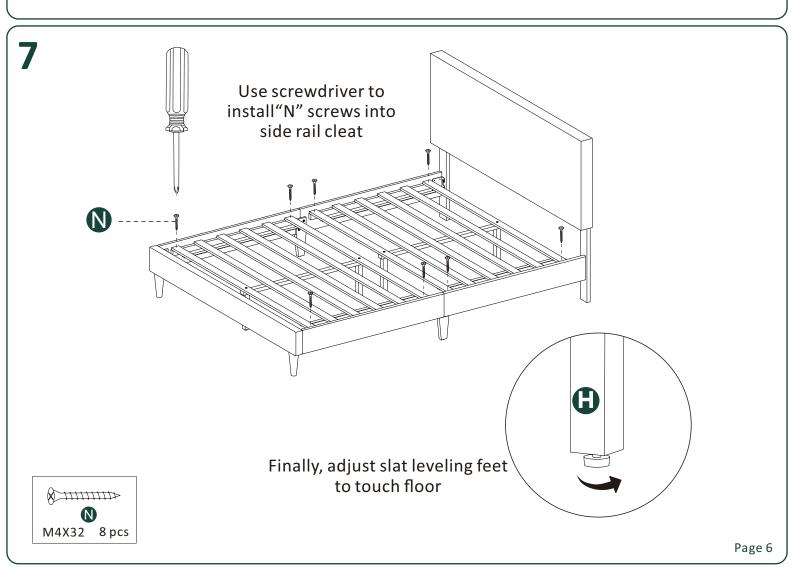

## FOR ADDITIONAL HELP:

Contact our support team at: orders@rizebeds.com
Or call us at: 844-545-8865

## **CAUTION:**

Do not attempt to move the bed when fully assembled. This could result in damage to the rails, headboard, or footboard.

When placing furniture on non-carpeted flooring, we recommend the use of floor protection such as an area rug or furniture pads. Area rugs and padding not included with purchase.